


TSX QUICK REFERENCE GUIDE

Tuesday Morning Set for Election

Page 1




Check seal, remove and unlock door. Press red or white button located on the left upper side of tablet.

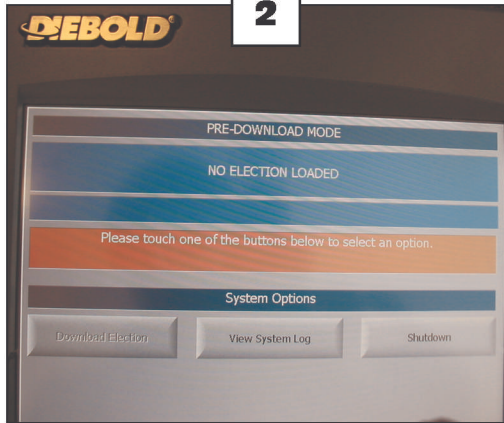


Wait for three bars to display. (See picture above).



Insert the memory card into the slot. (This side up).

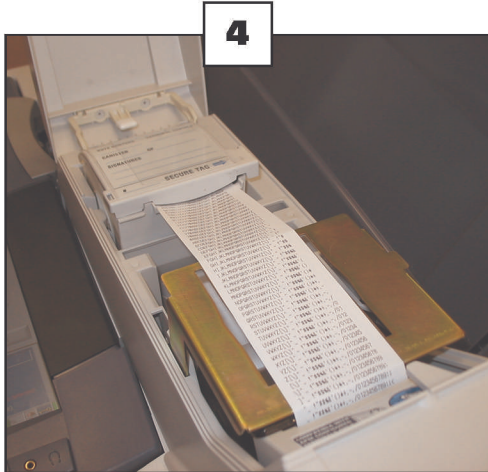


Press Test Printer. Printer test passed then press OK. Press Start Take Up.

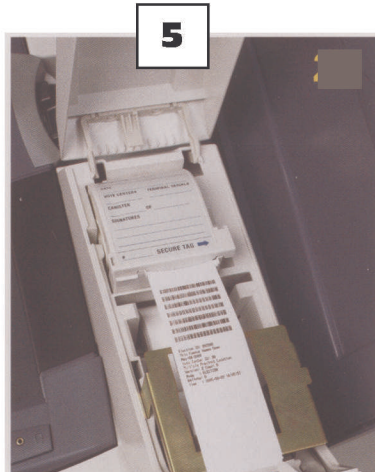

Press OK to set for election.




Lift canister and place on it's left side (careful not to tear paper). Place blue seal over door seam. Place canister back into the unit.

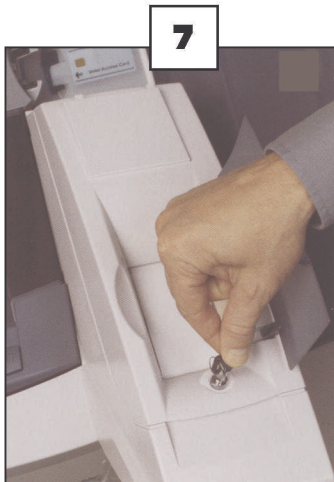

Close and lock lid.



Close, lock and seal the memory card door.

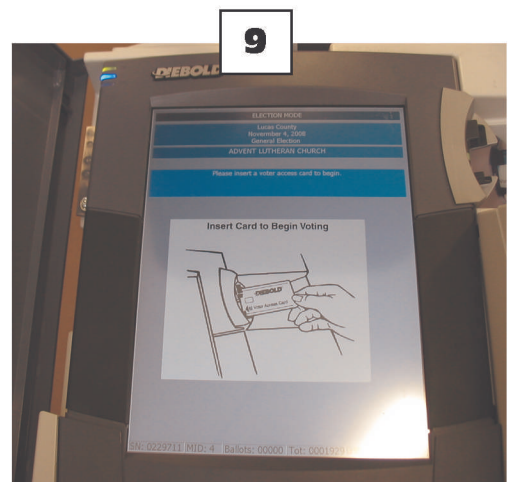

You are now ready to process a voter.